



INSTRUCTIONS




C&H BASEBALL
2215 60th Drive East
Bradenton, FL 34203
941-727-1533 Fax 941-727-0588

CAG100/CAG400 NON-FOLDING CAGE INSTALLATION INSTRUCTIONS

***NOTE: LOCATE HARDWARE ON THE CAGE – HARDWARE IS WRAPPED TO THE SPREADER BARS NEAR THE BACK OF THE BUNDLE BEHIND THE WHEELS. THEY ARE MARKED “HARDWARE HERE”.**


STEP #1: ASSEMBLE THE TOP BOWS

Match the letters on the curved bow pieces to the same letters on the bow connectors. Insert the bow connector into the matching curved bow pieces and secure with $\frac{1}{4}$ " x 3" bolt and lock nut. Repeat for all four bows.

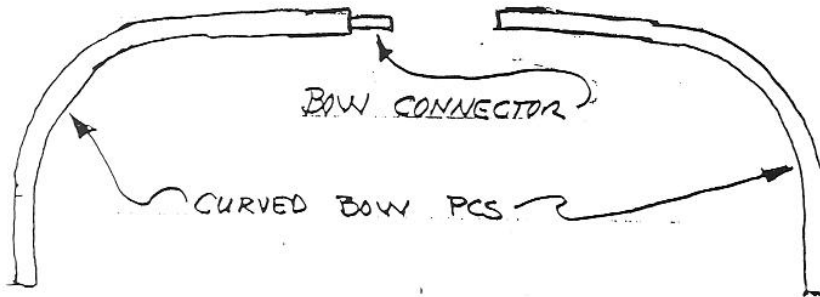


STEP #2: ASSEMBLE TWO CURVED SECTIONS TO THE BACK SECTION

Insert the back section into the curved sections – matching the letters on the cage. Align the holes and secure with four (4) $\frac{1}{4}$ " x 3" bolts and lock nuts.

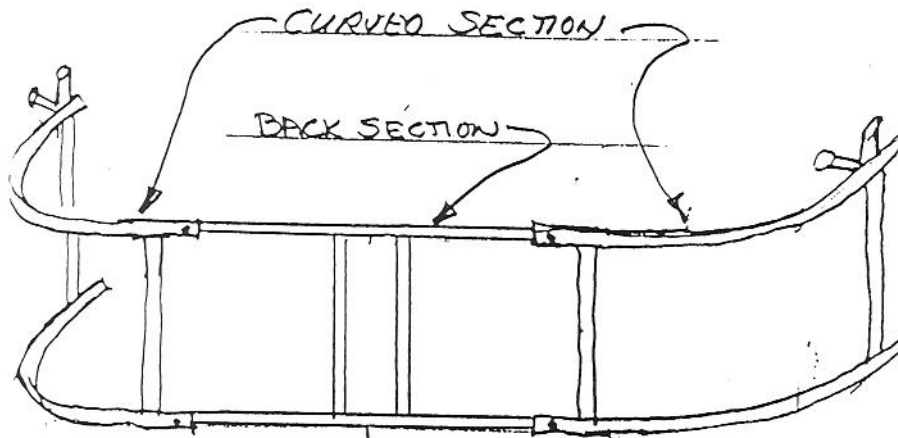

STEP #3: ASSEMBLE TWO SIDE SECTIONS TO CURVED SECTIONS

Insert the left and right sections into the curved section – matching letters. Align the holes and secure with two (2) $\frac{1}{4}$ " x 3" bolts and lock nuts.

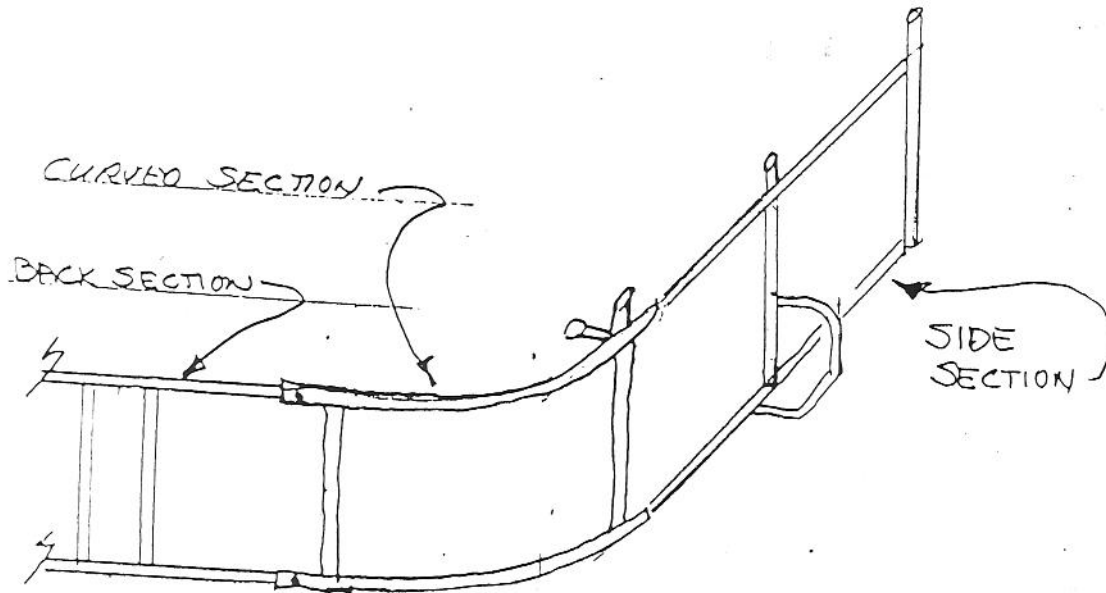

STEP #4: ASSEMBLE THE BOWS TO BASE FORMED FROM SECTIONS 2 & 3

Place the bows assembled from Step 1 over the short pipes on the base from section 3. Match the letters.

STEP #5: ASSEMBLE SPREADER BARS BETWEEN BOWS

Matching the letters, attach spreader bars to bows and assemble using $\frac{1}{4}$ " x 3 $\frac{1}{2}$ " bolts with lock nuts.

STEP #6: ASSEMBLE WHEEL KIT

Use the four (4) $\frac{3}{8}$ " x 1 $\frac{1}{2}$ " bolts and $\frac{3}{8}$ " lock nuts to attach the swivel wheel kit to the back of the cage.



STEP #7: ASSEMBLE THE BATTING CAGE NETTING

***** NOTE: IF YOU HAVE CAGE PADDING – IT IS RECOMMENDED THAT YOU INSTALL ALL OF THE CAGE PADDING WITH THE EXCEPTION OF THE FRONT BOW AREA – AS YOU’LL BE LACING THE NET DIRECTLY TO THE CAGE FRAME.**

***** NOTE: WHILE IT’S NOT NECESSARY, YOU MAY USE STANDARD ZIP TIES TO HOLD THE NET IN PLACE WHILE YOU USE THE TWINE TO LACE THE NET. ZIP TIES ARE NOT INCLUDED.**

- Pull the cage net from the box, and lay it out completely. Locate the stainless steel ring, or colored ribbon with tag. This is your starting point. Start with attaching this point to the top front center of the batting cage. Follow the roped border along the top front bow – working down the left and right side.
- Then, follow the roped border along the bottom of the cage – and attach to the frame working from one side of the cage around the back to the other side.
- Using a 16” – 2’ piece of twine, and working inside the batting cage – lift the net to the point where you want to ‘attach’ the net to the cage. YOU ARE NOT LACING AT THIS POINT. Rope the piece of twine through the mesh and around the top of the cage, and tie the two pieces together at the desired height. See picture below.



netting is attached to the cage inside, not laced like the front bow.

- Moving down the bend in the cage’s bow – repeat the same step as above. Follow down the sides of the second bow, repeat for the other sections inside the cage. Length and number of connections are to your liking.
- The finished result should resemble the picture below.

